


> **PH SENSOR** general purpose

Tethys General Purpose pH Sensor with 3/4" NPT thread on both front & back is a heavy-duty pH probe with Ryton body suitable for many industrial water application. Mounting thread on both front and back allow for in-pipe (continuous measurement) or submersible installations of pH Sensor. This pH sensor offers excellent chemical and impact resistance.

specifications

| | |
|--------------------------------|---|
| pH Range | 0-14 pH |
| Response Time | 5 seconds to 95% of full response |
| pH Sensor Type | Convertible style combination pH sensor |
| Body Material | Ryton |
| Reference | Double Junction with porous Teflon |
| Mounting | Immersion or In-Line |
| Temperature Range | 0-80 °C |
| Maximum Operating Pressure | 100 psi |
| Temperature Element | Pt-100 Ohm RTD |
| Temperature Compensation | Automatic |
| Integral Sensor Cable Length | 6 meter |
| Mounting Thread on Sensor Body | 3/4" NPT threads, front & back |

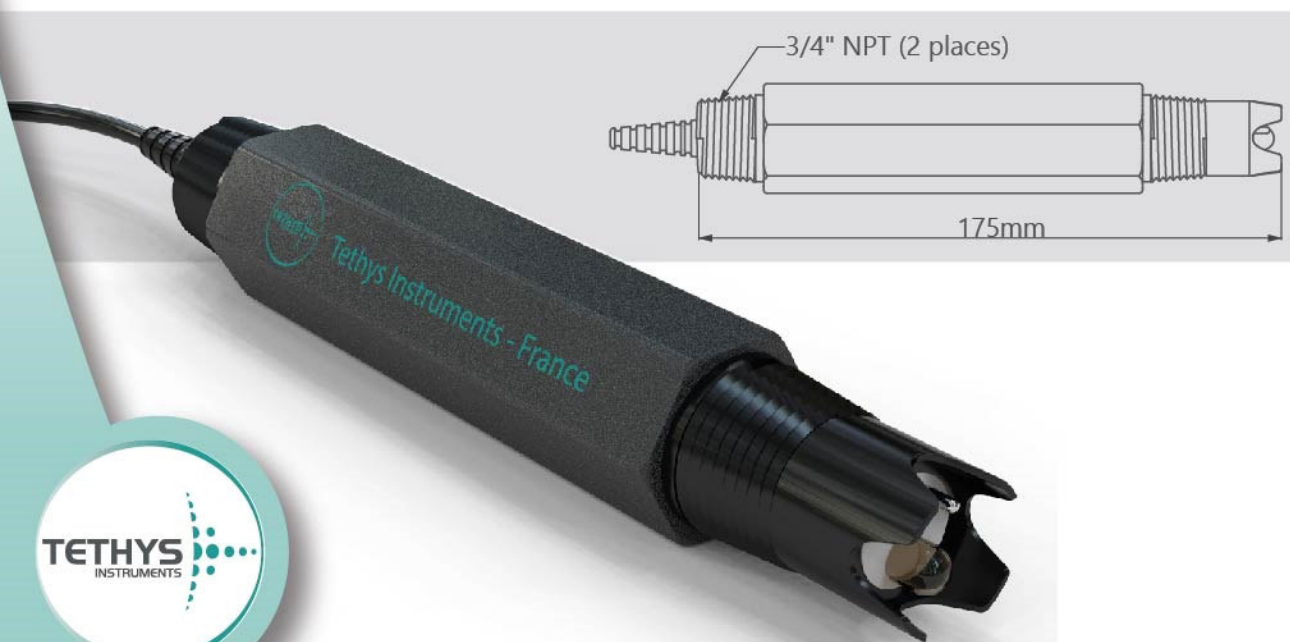

ELPH pH online electrode, general purpose
Range : 0-14
6 meters of cable length
Built-in ATC RTD 100 ohm

